

RT OF REMOTE CONTROL DUPLICATOR





1. Function Description:



2. Remove the existing code:

Press Arming and Disarming at the same time, LED starts flashing steadily after 5 seconds, release both buttons and the code will be removed successfully.

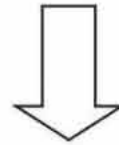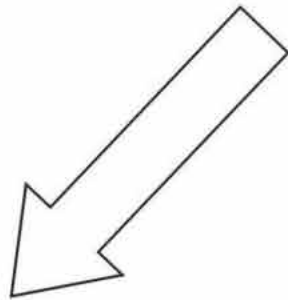

4. Resume: When remove the code carelessly, press Starting and Searching at the same time, LED starts flashing steadily after 5 seconds, release both buttons and the code will be resumed successfully.



3. Duplicate code: Put the Original Transmitter (the blue one) and Duplicator as close as possible, Press Arming of both Duplicator and Original Transmitter at the same time, LED starts flashing steadily after 3 seconds, release both buttons and the code will be duplicated successfully. Repeat the above operation to duplicate code of other buttons.



www.rclick.co.uk