

### 1. Lock - Arm/window raising (25seconds)

Press button 1, siren chirp once, direction lights flash once, all doors are locked, engine is disabled, and system enters into arm situation. At the same time system give 25seconds signal to raise window up. In Arm status, any illegal intrusion (open door / foot break / break glass / strike / ACC) will trigger system and alarm. Press button 1 can stop alarming but system is still in arm status.

### 2. Unlock - Disarm

In arm status, Press button 2 to disarm and unlock doors, **dome light turn on for 30seconds**, siren chirp twice and direction light flash 3times. If in mute arm status, **only direction lights flash 3 times**.

### 3. Mute Arm

Press button 1 for 2seconds. Direction light flash 1time to indicate system enters into mute arm situation. In mute arm status, system will give light flash alert if system is triggered lightly. Anyway if door is open or ACC is ON, siren sounds and light flash 30seconds. To exit mute arm status, press button 1 again for 2seconds, direction light flash 2 times to indicate system back to normal arm status with sound and light.

### 4. Boot (Trunk) release

In disarming status, press button 2 for 3seconds to open the trunk.

In arming status, there have 2methods to open trunk:

A. Disarm system, unlock doors and open trunk.

In arming status, press button 2 for 2seconds to disarm system, unlock doors and open trunk. Siren chirp 2times and light flash 3times.

B. Disarm system and open trunk, but without unlock doors.

In arming status, press button 3 for 2seconds to disarm system and open trunk, but doors remain locked. Siren chirps 2times and light flash 3times.

### 5. Car Finder

In arming status, Press button 1 for 2seconds, siren chirps 30seconds with direction lights flash 15 times to locate car position. If in mute arm status, **only direction lights flash 15 times**.

### 6. Emergency call

Press button 2 and button 3 simultaneously for 2seconds, siren chirp 30seconds with light flash to call for help. Press any button to stop. Or for 4 buttons, press button 4...

### 7. Foot Brake - Locking doors while driving

After close all doors well, turn ignition ON, 15seconds after step foot brake, all doors will be looked automatically. When ignition OFF, all doors will be looked automatically. If doors are not closed well, system won't lock doors automatically. When ignition ON, all doors will be locked or unlocked by transmitter. System won't be triggered.

### 8. Arm bypass shock sensor and ultrasonic sensor

In arming status, Press button 1 + button 2 simultaneously for 3seconds, light flash once to indicate system is armed bypass shock sensor and ultrasoins sensor. 30seconds later press button1 and button 2 simultaneously again for 3seconds, light flash twice to indicate shock sensor and ultrasonic sensor is activated, system is still in arm situation.

### 9. Reminder of unclosed door

5seconds after press button1, if any door is unclosed wellg siren chirps 3times to remind car owner to colse the door well, system won't alarm. After we close that door well, if open again, system will be triggered, siren chirps 30seconds with light flash.

### 10. Valet mode

In valet mode, alarming functions are disabled, system only have central door locking function.

**Turn ignition ON**, press button 1 for 3seconds, direction light turn ON, then press button 3seconds within 5seconds to enter into valet mode.

### 11. Pneumatic lock and electronic lock - Central Door Locking Time Selector

For pneumatic lock 3.5s set jumper JP1 to A position, For electric lock 0.8s set jumper JP1 to B position.

### 12. Emergency disarm / Override

In arming status, if you need to disarm system without transmitter, operate as following:

Open the door, Press the foot brake, Turn ignition key from ACC OFF to ON position for 10 times, and stay at the ON position, direction light keep ON, Siren long sound, the system will be disarmed when the siren stop.

### 13.

### 14. Learning Transmitter Codes

This remote keyless entry system can support up to 4 remote controls. The included transmitter is pre-programmed into the system memory at the factory. Follow the below steps to add or delete a new transmitter.

#### Code leaning

Open the door, Press the foot brake, Turn ignition key from ACC OFF to ON position 5 times, and stay at the ON position, direction light keep ON, enter into learning mode, **(within 5seconds)** Press any button of new transmitter, siren chirp once to indicate a successful learning. Repeat the above procedures for the maximum learning of 4 transmitters.

**Note:** above learning procedures shall be finished within 5 seconds. Or the system exits code learning.

#### Code deleting

**Note:** once entered into code learning mode, all previously learned remotes will be cleared (deleted).

# Wiring Diagram

JP1 Electric / Pneumatic option  
 JP2 Siren / No Siren option  
 JP3 Single pulse / Double pulse option  
 JP4 Side door trigger Negative / Postive option

