


Wiring Diagram

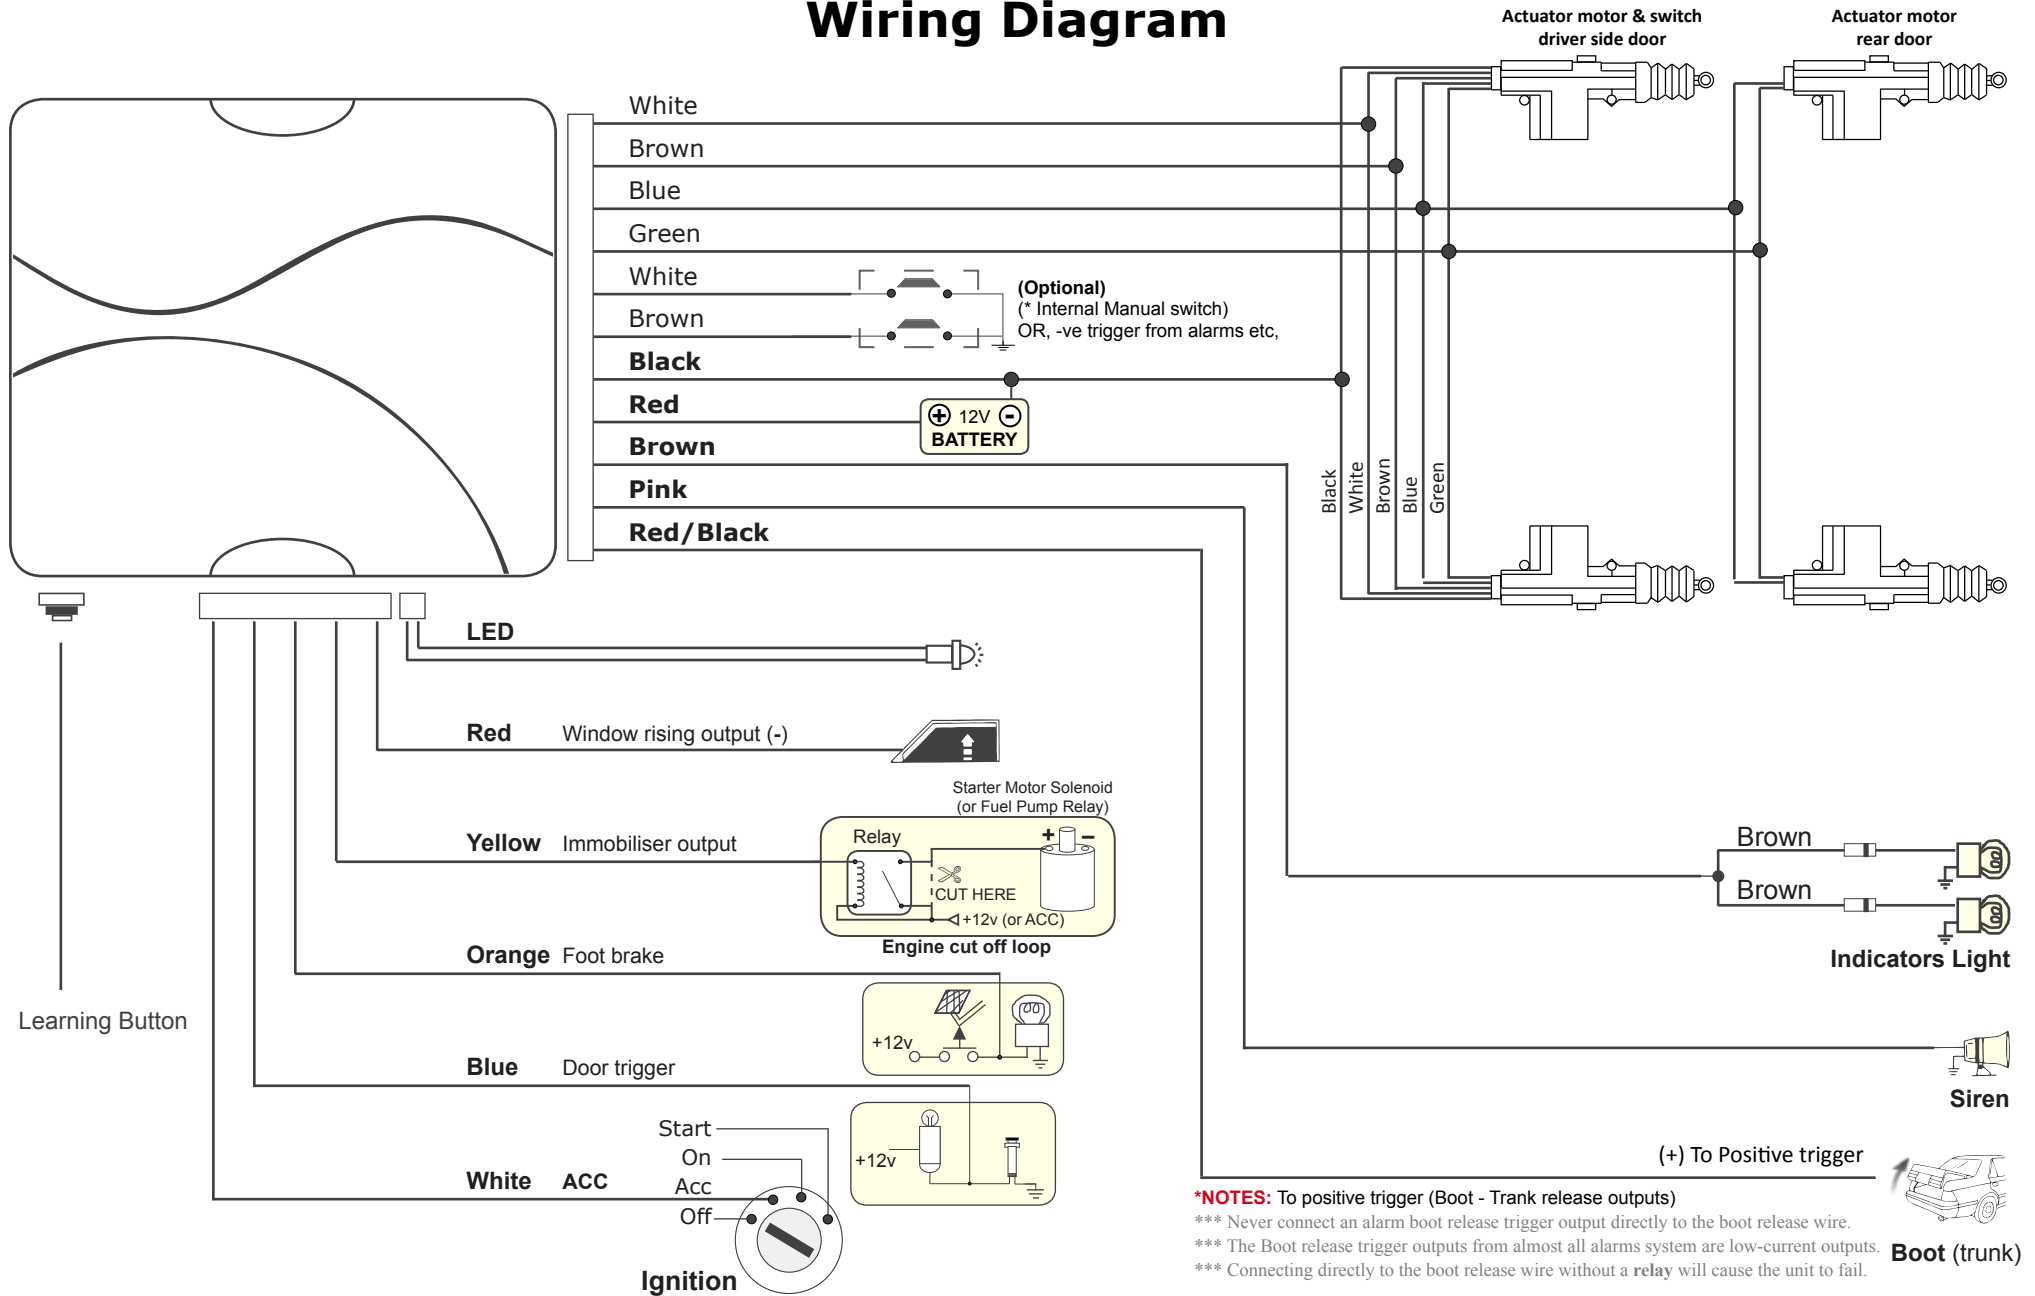

***NOTES:** To positive trigger (Boot - Trunk release outputs)

*** Never connect an alarm boot release trigger output directly to the boot release wire.

*** The Boot release trigger outputs from almost all alarm system are low-current outputs.


*** Connecting directly to the boot release wire without a relay will cause the unit to fail.




Boot (trunk)

User's Manual




1. Lock

Press  once, direction lights flash one time with central locks locked up automatically. LED status indicator starts to flash slowly.


2. Unlock


Press  once, direction lights flash 2 times with central locks unlocked automatically. LED status indicator stops flashing.

3. Boot (Trunk) release


Press and hold  or , the trunk is opened with direction lights flashing 3 times quickly.
NOTE: some remotes have this button  for boot release instead!

4. Car Finder

A. 3-button remote transmitter: In locking state, press  once, direction lights flash 5 times.

B. 4-button remote transmitter: In any state, press  once, direction lights flash 5 times.

5. Power Window output *

Press  once, direction lights flash once with central locks locked automatically. Meantime, the system gives 20s window rising output.



* The doors will lock and close electric window (if vehicle has total closure or optional module - windows rollup module - has been installed).

6. Foot Brake - Locking doors while driving

When you press brake pedal your system will automatically lock all doors while driving. Turn ignition off to open all doors. Please **note**: if ignition on and any doors opened, it will not lock doors via above method.

7. Door-open alert - (lights flashing)

When ACC ON, open the door, parking lights will flash 15 times to alert cars from behind.

If you want to stop this function, ACC to ON, press and hold  and  at the same time for 2 seconds, direction lights flash 1 time and siren sound 1 time. Repeat above procedures to regain this function, Direction lights flash 2 times and siren sound 2 times.

8. Alarming with light and sound

In locking state, if Door is opened by force, direction lights will flash with car horn sounding.

In locking state, if ACC turns ON, direction lights will flash with car horn sounding.

In locking state, if Foot brake is pressed, direction lights will flash with car horn sounding.

9. Lock White wire - externally controlled!

This can be connected to Internal Manual Switch OR, -ve trigger from an EXTERNAL alarms etc...

10. Unlock Brown wire - externally controlled!

This can be connected to Internal Manual Switch OR, -ve trigger from an EXTERNAL alarms etc...

11. Immobiliser Relay Output - Engine cut off

An immobiliser relay output to connect to Immobiliser relay for engine cut off.
(**Relay optional** - not included)

12. Learning Transmitter Codes

This remote central lock system can support up to 4 remote controls. The included transmitter is pre-programmed into the system memory at the factory. Follow the below steps to add or delete a new transmitter.

Code leaning

A. Press the Learning Switch on the main control unit for 1.5 second, direction lights flash all time and original car horn sounds 1 time, and then press any button on the remote transmitter once, siren sounds 1 time indicating learning is successful. Repeat the above procedures for the maximum learning of 4 transmitters.

Note: above learning procedures shall be finished within 5 seconds. Or the system exits code learning.

Code deleting

Note: once entered into code learning mode, all previously learned remotes will be cleared (deleted).