


DRL01

INSTALLATION

DRLS


Led Daytime Running Lights

Please read the device manual before your installation

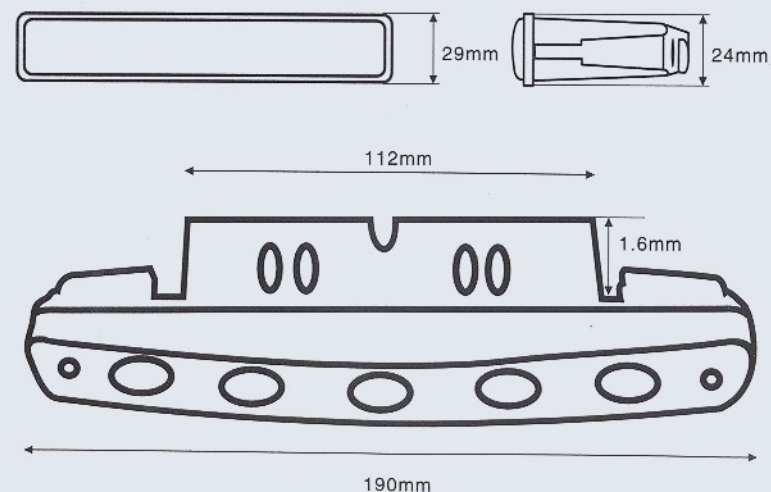

DRL01

Wiring Diagram

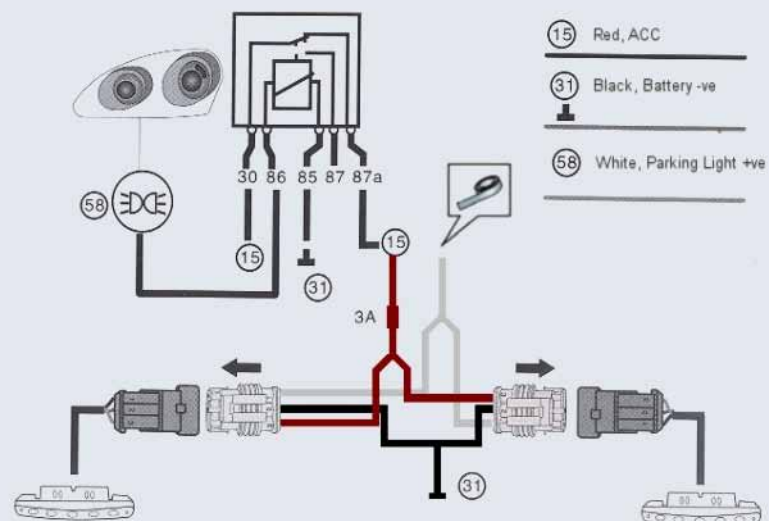

EN ENGLISH


Note! According to ECE R-48, only two front position lights may be active. If the position light function is to be taken over by the LED lights, the standard position light must be deactivated.

Montage

When mounting, it must be ensured that the light stands proud after installation. This can be achieved by using a microcellular rubber strip, for example. When used with position light min. 350 mm.

**With vehicles less than 1300 mm wide, the distance has to be at least 400 mm.

*** When used with position light max. 400mm. If the light is only used for the daytime running light function, this restriction does not apply.

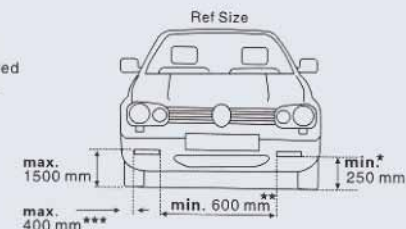

Electrical connection

Caution!
Daytime running lights

Lay and connect the cables in accordance with the connection diagram.

According to the connection diagram, the daytime running lights are switched on automatically with the ignition.

- are not a substitute for low beam at dawn/dusk or during darkness.